

## 4 INSTALLATION

Menu item	Service function	Comments
14.6:	Show display contrast	<p>This function can be used to change the contrast of the display.</p> <p><b>PLEASE NOTE!</b> It is also possible to reduce the contrast to such an extent that the screen display is no longer visible. With each PowerOnReset (remove fuse) the contrast is reset to the as-delivered condition.</p>

### EASYSTART SELECT VEHICLE WORKSHOP MENU

The service functions listed in the following can be displayed, read out and / or changed via the vehicle workshop menu.

**PLEASE NOTE!**

To correct the fault, refer to the heater's repair instructions.



Press the **◀** or **▶** button to select the required item, e.g. »Item 2: Select temperature unit, °C or °F« and confirm by pressing the **OK** button.

Use the **◀** or **▶** button to select the temperature units °C or °F.

Press the **OK** button to confirm the selection.

Exit the workshop menu via Timeout.

### OPENING THE VEHICLE WORKSHOP MENU

Display ON, the Start display appears.



Start display  
water heater



Start display  
air heater

Press button **◀** and **▶** at the same time for longer than 5 sec.

The workshop menu is displayed.

### SERVICE FUNCTIONS OVERVIEW

Menu item	Service function	Comments
1.1:	Display current fault	<p>Heater must be switched on.</p> <p>The AF display and the digits of the current fault are displayed alternately.</p> <p>The current fault is always written in fault memory F1.</p> <p>"ndi" is displayed if no diagnostics cable is connected.</p>
1.2:	Read out fault memory F1 – F5	<p>Heater must be switched on.</p> <p>The F1 display and the digits of the error code are displayed alternately.</p> <p>Select fault memory F2 – F5 display with the <b>◀</b> or <b>▶</b> button.</p> <p>"ndi" is displayed if no diagnostics cable is connected.</p>

## 4 INSTALLATION

Menu item	Service function	Comments
1.3:	Delete fault memory F1 – F5	Heater must be switched on. Press the <b>DEL</b> button to confirm the DEL display. "ndi" is displayed if no diagnostics cable is connected.
2:	Select temperature unit, °C or °F	Default: °C
3.1:	Set undervoltage limit	Default: 8 volt, Setting range: 8 – 28 volt in 0.1 volt increments (display, e.g. 271 for 27.1 volt).
3.2:	Set undervoltage limit "Offset"	Default: 0 volt, Setting range: 0 – 6 volt in 0.1 volt increments (display, e.g. 55 for 5.5 volt).
3.3:	Set "Fault detection" debounce time	Default: 20 seconds, Setting range: 5 – 255 seconds in 1 second increments.
4.1:	Setting the operating time	Default: 60 min. for water heaters / infinite for air heaters Setting range: 10 – 120 min. in 1 min. increments, from the 120th min. – 720 min. in 5 min. increments.  Continuous heating mode is also possible for air heaters (select OFF).  <b>PLEASE NOTE!</b> The function is blocked for combination with other control units.
5:	Reset to as delivered condition	Press → button <b>OK</b> to confirm.
6.1:	Read out control unit hardware version	Function is intended for Internal purposes only.
6.2:	Read out control unit hardware version	Function is intended for internal purposes only.
6.3:	Read out control unit software version	Function is intended for internal purposes only.
6.4:	Read out control unit software version	Function is intended for internal purposes only.
14:	Show all icons (display)	Cancel with <b>ESC</b> button